


TWO30NINE


Hardware Placement *guide*

Door Knob Placement


UPPER DOORS

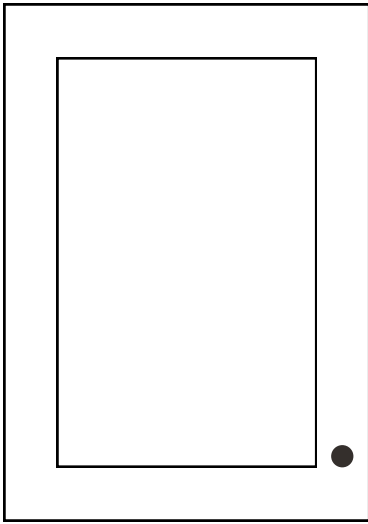

MODERN

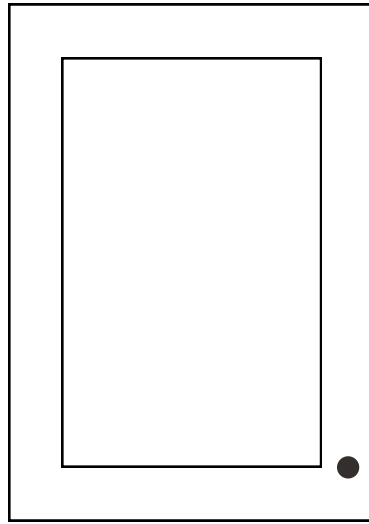


CLASSIC

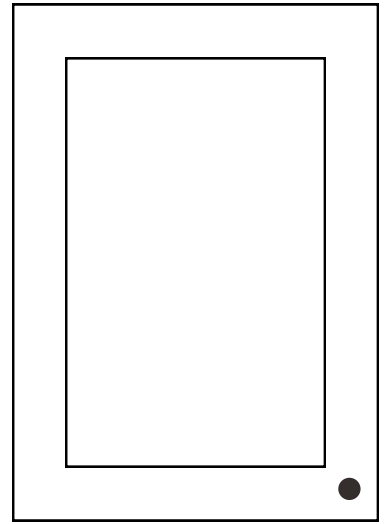


TRADITIONAL


LOWER DOORS

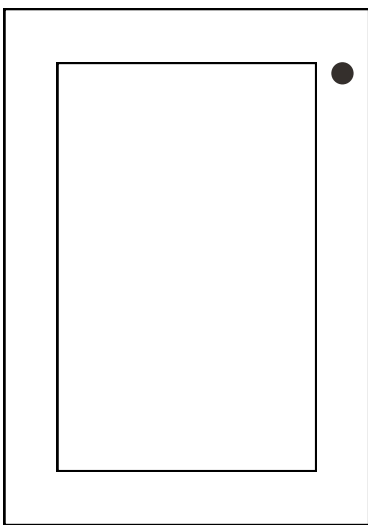

MODERN

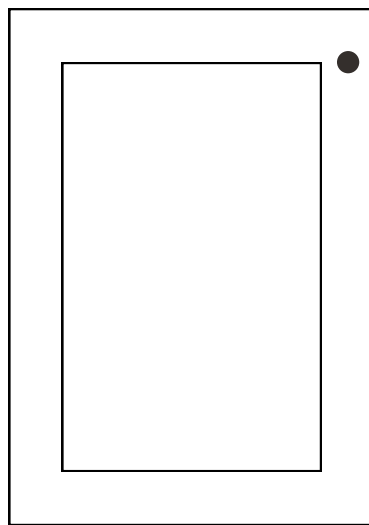


CLASSIC

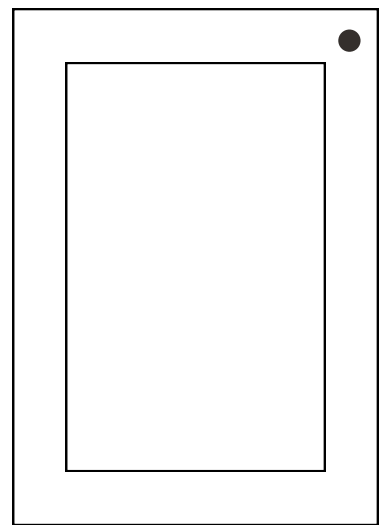


TRADITIONAL

Door Handle Placement

UPPER DOORS




MODERN




TRADITIONAL

LOWER DOORS




MODERN




TRADITIONAL

Drawer Placement


PULLS ON DRAWERS



RAISED




EVENLY SPACED




CENTERED


KNOBS ON DRAWERS

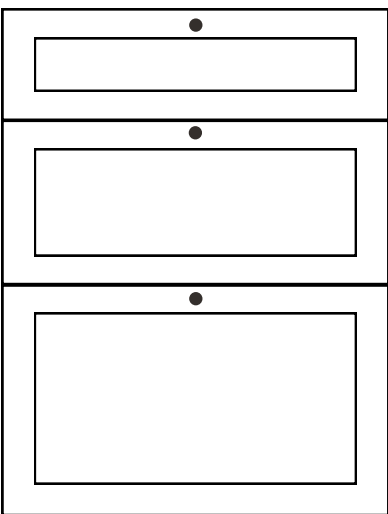

RAISED




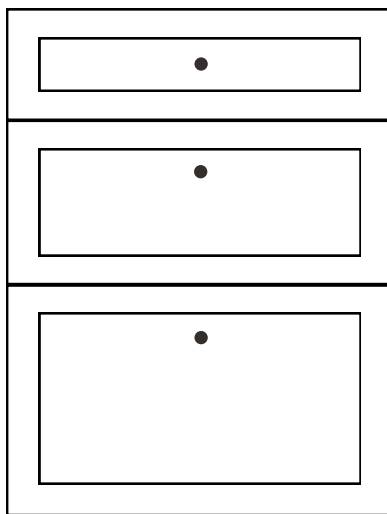


EVENLY SPACED

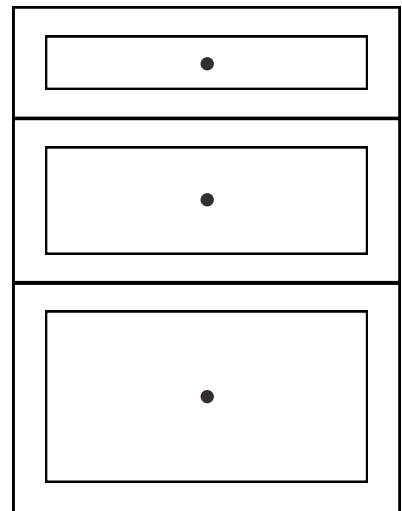







CENTERED

Mixing Handles and Knobs

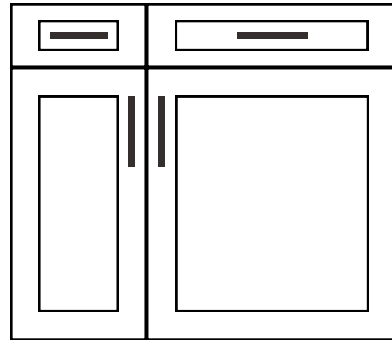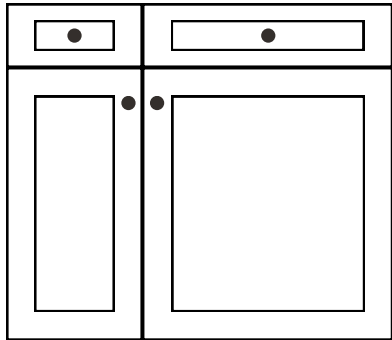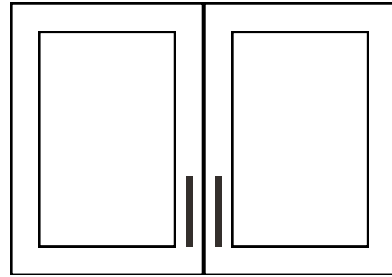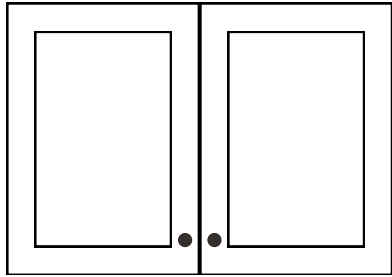

ALL KNOBS

ALL PULLS

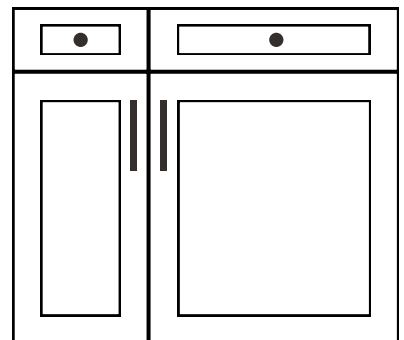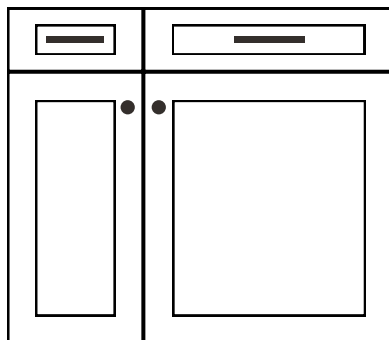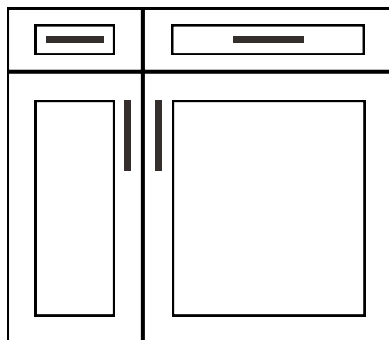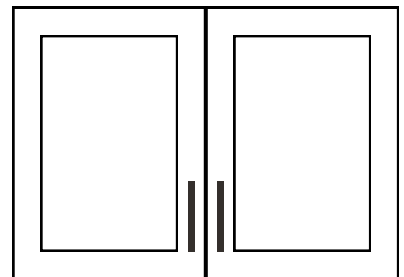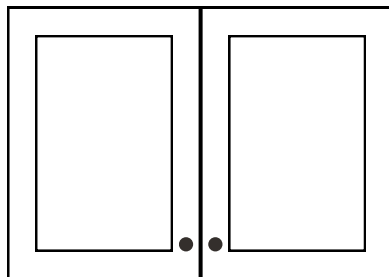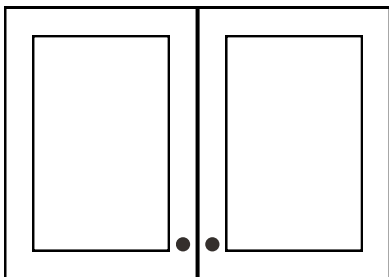


KNOBS ON UPPERS


KNOBS ON DOORS
PULLS ON DRAWERS

PULLS ON DOORS
KNOBS ON DRAWERS


Slab Door Placement




KNOBS



PULLS




MODERN






CLASSIC

Draw Your Own / Panel Fronts


NOTES:




UPPER DOOR

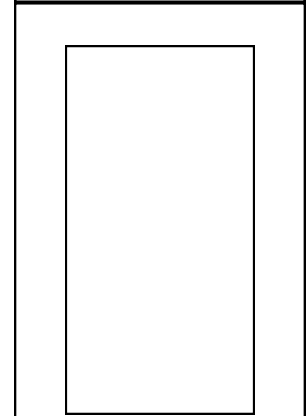

PANTRY




LOWER DOOR




DRAWERS

Draw Your Own / Slab Fronts

NOTES:




UPPER DOOR



PANTRY



LOWER DOOR



DRAWERS