




Hardware Placement *Guide*


TWO30NINE
by DECOR

Door Knob Placement


UPPER DOORS

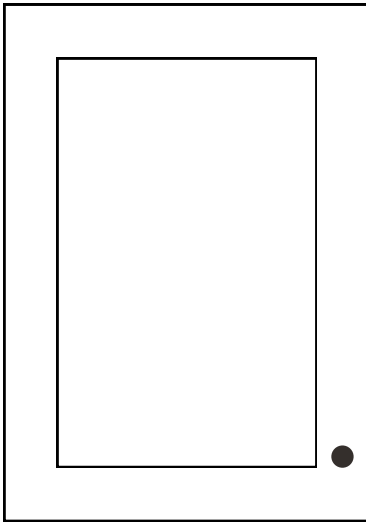

MODERN

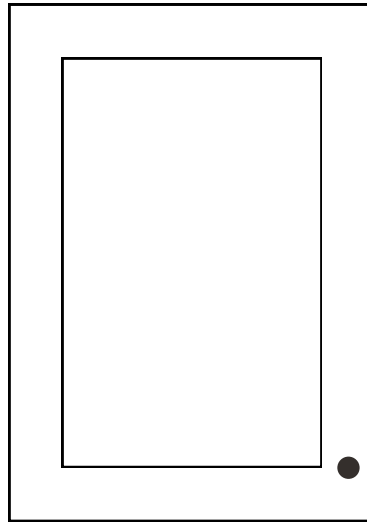


CLASSIC

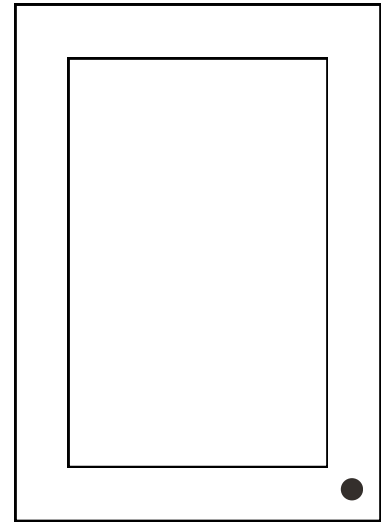


TRADITIONAL


LOWER DOORS

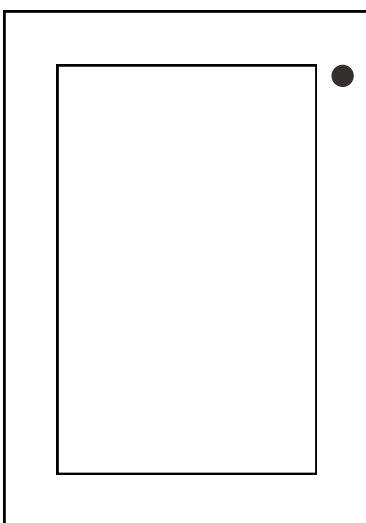

MODERN

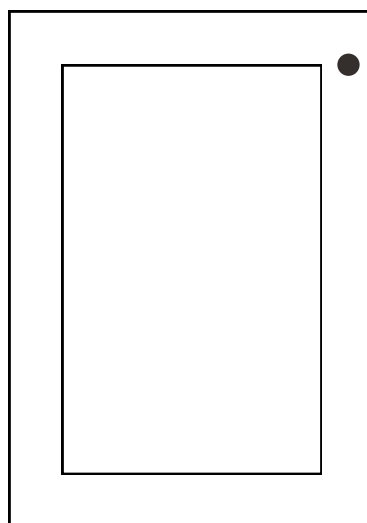


CLASSIC

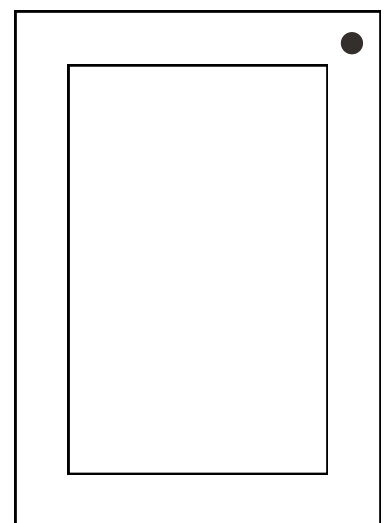


TRADITIONAL

Door Handle Placement

UPPER DOORS




MODERN




TRADITIONAL

LOWER DOORS




MODERN




TRADITIONAL

Drawer Placement


PULLS ON DRAWERS



RAISED




EVENLY SPACED




CENTERED


KNOBS ON DRAWERS

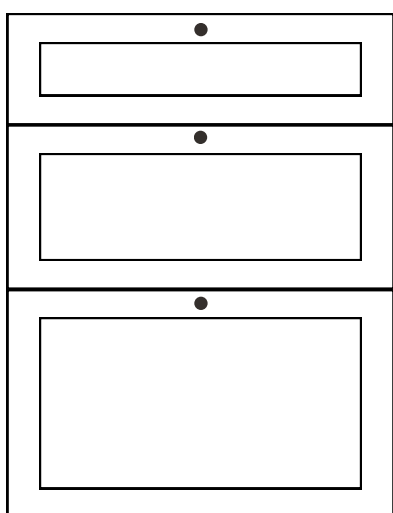

RAISED




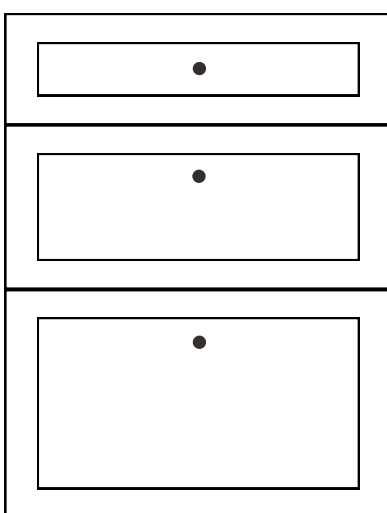


EVENLY SPACED

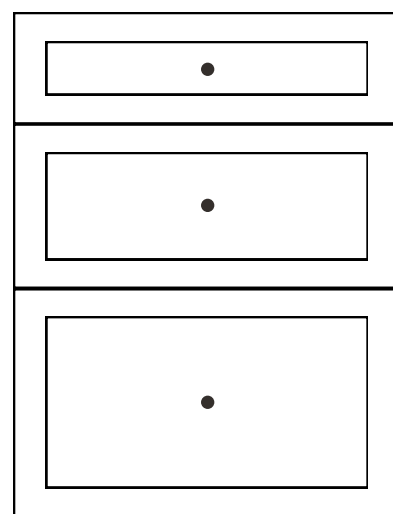





CENTERED

Mixing Handles and Knobs

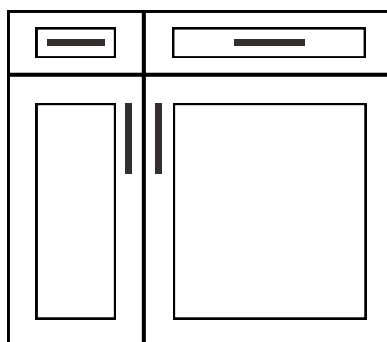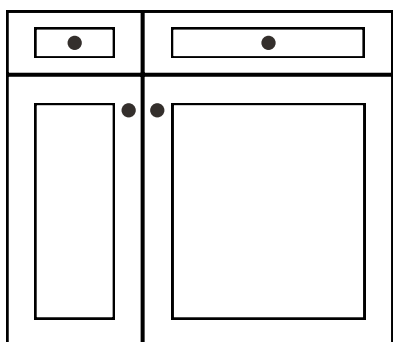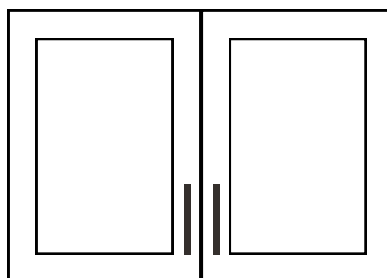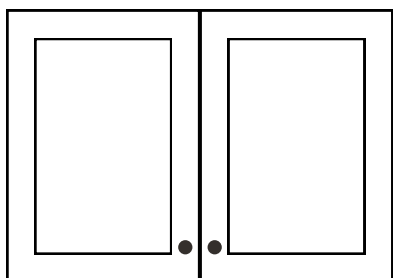


ALL KNOBS


ALL PULLS

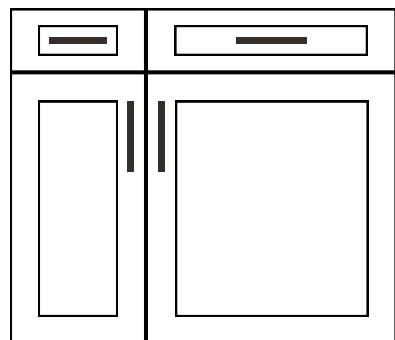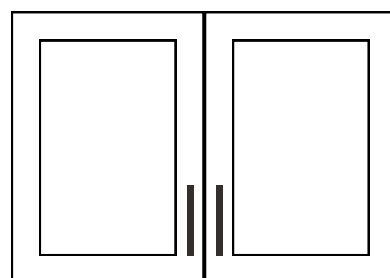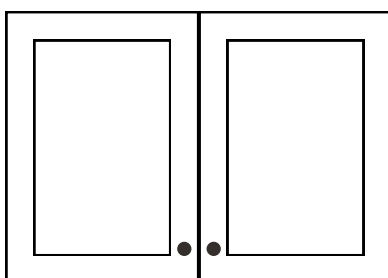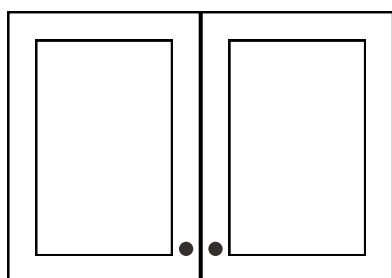

KNOBS ON UPPERS

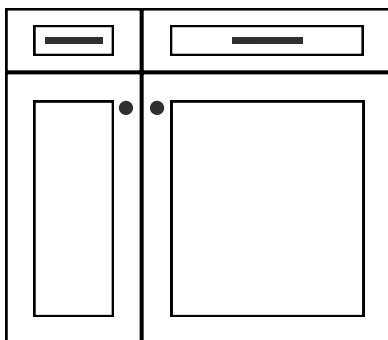


KNOBS ON DOORS
PULLS ON DRAWERS

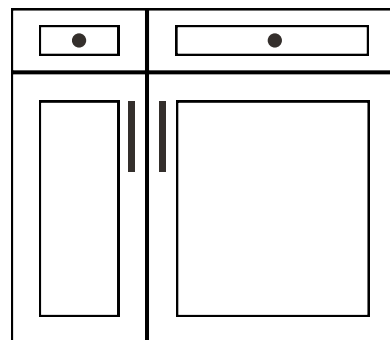


PULLS ON DOORS
KNOBS ON DRAWERS


Slab Door Placement




KNOBS



PULLS




MODERN






CLASSIC

Draw Your Own / Panel Fronts


NOTES:




UPPER DOOR

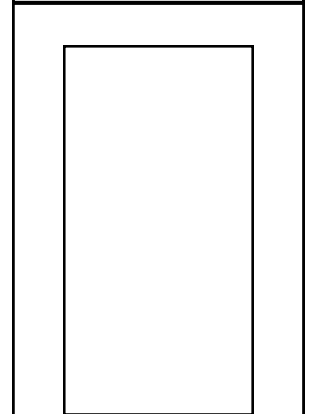

PANTRY




LOWER DOOR




DRAWERS

Draw Your Own / Slab Fronts


NOTES:




UPPER DOOR



LOWER DOOR



DRAWERS



PANTRY